

KANE958

Flue Gas Analyzer with direct O2 Measurement and CO sensor protection

KANE  LINK



— BACKED BY —


10
YEAR
WARRANTY



48 HR
SERVICE


ups
FREE
SHIPPING

CONTENTS

Page No.

KANE958 OVERVIEW	5
ANALYZER FEATURES AND KEYPAD	6-9
KEYPAD BUTTONS	7
ANALYZER LAYOUT	8
BACK OF ANALYZER - PROBE ETC	9
BATTERIES	10
BATTERY TYPE	10
REPLACING BATTERIES	10
TIME AND DATE	10
CHARGING NIMH BATTERIES	10
BATTERY DISPOSAL	10
GENERAL SAFETY	11
COLD WEATHER PRECAUTIONS	11
FIRST TIME USE	12
GENERAL OPERATING PRINCIPLE	12-16
QUICK START	12
USER INTERFACE	12
STATUS	13
STATUS BAR	13
STATUS BAR LAYOUT	13
STATUS BAR MESSAGE AREA	14
STATUS BAR ICONS	15
STATUS BAR ICONS LEVEL	15
STATUS BAR MENU OPTIONS	16
STANDARD OPTIONS	16
USING MENU	16
MENU ITEMS	17
MEASURING FLUE GASES	18

CO PROTECTION PUMP OPERATION	19
AUX SCREEN	19
EDITING AUX SCREEN	19
02/EFF SCREEN	19
CO/NO SCREEN	20
STORED MEMORY LOGS	20
MENU OPTIONS	20
VIEWING STORED LOGS	21
LOG VIEW MENU OPTIONS	21
FINDING STORED REPORTS	21
REPORT MENU OPTIONS	22
PRESSURE & TEMPERATURE TESTING	22
TEMPERATURE & PRESSURE DISPLAY	23
VIEWING, SENDING & PRINTING	23
PRESSURE MEASUREMENT GOOD PRACTICE	23
LARGE BORE TUBING ISSUES	23
PRINTING	24
KANE INFRARED PRINTER	24
PRINTOUTS	24
KANE  LINK	25
SPECIFICATIONS	26-27
CONFORMITIES	27
WARRANTY	27
ANNUAL RECERTIFICATION SERVICE	28

KANE958 OVERVIEW

Your KANE958 combustion Analyzer measures:

- Carbon Monoxide (CO)
- Oxygen (O₂)
- Pressure
- Differential Temperature
- Temperature
- Differential Pressure

Depending on your options it measures or calculates:

- Carbon Dioxide (CO₂)
- Nitric Oxide (NO)
- Nitrogen Oxides (NO_x)
- CO/CO₂ ratio
- Combustion Efficiency
- Losses
- Excess Air
- Sulphur Dioxide (SO₂)
- Nitrogen Dioxide (NO₂)

Your KANE958 has a protective rubber cover with magnets for “hands-free” operation and is supplied with a flue probe with integral temperature sensor.

Your KANE958 has a low flow detector system to switch off the Analyzer pump if it detects water entering from an over filled water trap.

Your KANE958 has a large 6 line display showing data and test results based on your actions. The display bottom line also highlights Analyzer status at all times.

Your KANE958 prints test results using an optional infrared printer or wirelessly sends them to the KANE wireless APP.








Your KANE958 stores up to 45 logs of any combination of Combustion, AUX, Temperature & Pressure test results.

You can enter 2 lines of 24 characters on your test results printout.

ANALYZER FEATURES AND KEYPAD



KEYPAD BUTTONS

ICON	DESCRIPTION
 SAVE LOG	Long press to store data
 PRINT REPORT	Short press to print a report - Analyzer offers a destination choice when wireless & irda fitted
 NAVIGATE UP	Short press to scroll up
 ENTER KEY	Use to select current option - also selects worklight in some dial positions
 NAVIGATE DOWN	Short press to scroll down
 DATA HOLD	Short press to hold current data on screen - see status bar section on page 13
 PUMP ON/OFF	Press to turn pump on or off




Function Keys




Rotary dial

ANALYZER LAYOUT

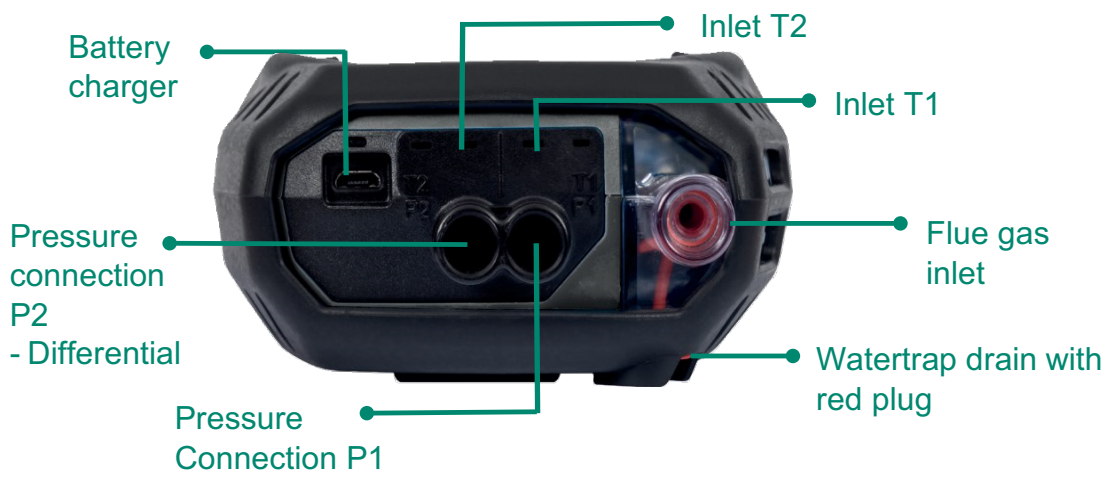

Red connector
- plugs into Flue
Flue Probe Temperature
Into T1
Narrow (+ve) pin must be
on right side
Flue probe hose

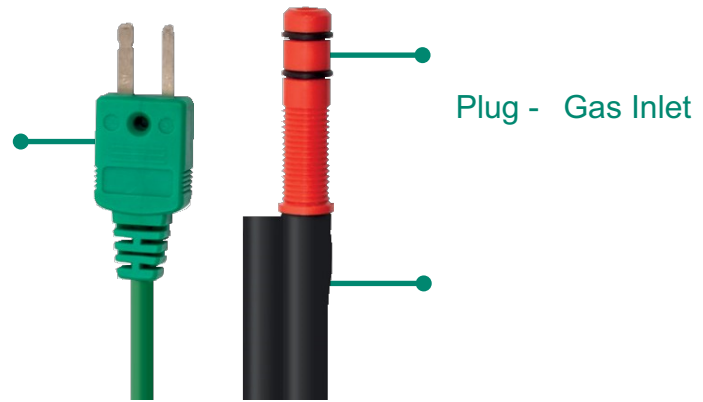



BATTERIES

BATTERY TYPE

Your KANE958 uses rechargeable Nickel Material Hydride (NiMH) batteries
- Using other battery types may void your Analyzer's warranty.

WARNING

Although you can use Alkaline batteries you must not charge your Analyzer with Alkaline batteries fitted. Do not mix NiMH cells with different capacities or from different manufacturers - All batteries must be identical.

REPLACING BATTERIES

Turn over your Analyzer, remove protective rubber cover, find battery compartment & fit 3 NiMH "AA" rechargeable batteries ensuring correct battery polarity. Replace battery cover & protective rubber cover.

TIME AND DATE

After changing batteries reset your Analyzer time & date.

CHARGING NiMH BATTERIES

Your KANE958 uses a standard Micro USB connector - For best results turn off then connect your charger. Charging indicator will illuminate then turn off when charging is complete.

Your first charge should be for 8 hours - Thereafter NiMH batteries can be topped up at any time, even for short periods

If your batteries discharge and your Analyzer enters a low power shutdown, 1 hour charge provides approx. 2 hours continuous use.

BATTERY DISPOSAL

Always dispose of depleted batteries using approved disposal methods to protect our environment.

GENERAL SAFETY



SAFETY WARNING

Your Analyzer extracts combustion gases that may be toxic in relatively low concentrations. These gases are exhausted from the back of the Analyzer. This Analyzer must only be used in well-ventilated locations by trained and competent persons after due consideration of all the potential hazards.

Portable gas detectors should conduct “bump” tests before relying on units to verify atmospheres are free from hazards. A “bump” test is a way to check an instrument works within acceptable limits by briefly exposing it to known gas mixtures to change the output of all sensors present.

NOTE: This is different from a calibration where your Analyzer is exposed to known gas mixtures but allowed to settle to a steady figure with readings adjusted to the stated gas concentration of the test gas.

Protection Against Electric Shock (In accordance with EN 61010-1:2010):

This Analyzer is designed as Class III equipment and should only be connected to SELV circuits. The battery charger is designated as:

- Class II equipment
- Installation category II
- Pollution degree 2
- Indoor use only
- Altitude to 6,562ft
- Ambient temperature 32°F to 104°F
- Maximum relative humidity 80% for temperatures up to 87.8°F decreasing linearly to 50%RH at 104°F
- Mains supply fluctuations not to exceed 10% of the nominal voltage

COLD WEATHER PRECAUTIONS

It is important you keep your Analyzer in a warm place overnight.

Electronic devices that become really cold, by being left in a vehicle overnight, suffer when taken into a warm room the next morning. Condensation may form affecting Analyzer performance. Analyzer electrochemical sensors are affected by condensation or water being sucked into the Analyzer, stopping sensors seeing flue gas. When this happens, oxygen or carbon dioxide reading will display as “-” & sensors may be permanently damaged.

If you think your Analyzer is affected by condensation or water ingress, leave the Analyzer running in a warm place with pump ‘ON’ sampling fresh air for a few hours. Connect your mains adapter or battery charger to avoid draining batteries. If you still experience problems please contact UEi Customer Services.

FIRST TIME USE

Charge your Analyzer batteries for 8 hours - an overnight charge should be sufficient for an average 8 hour day.

Take time to read this manual fully and be aware your Analyzer configuration may not support all features explained in this manual.

Before using your Analyzer ensure it is set up for your requirements.


NOTE: Your Analyzer STATUS bar displays current time, date and battery status - Check time & date are correct as they can only be changed if you have not stored logs in Memory to protect the integrity of your stored data.

GENERAL OPERATING PRINCIPLE

Using your KANE958 is simple with the rotary dial and user interface. Most tests can be made with little user activity.




Your Analyzer status bar offers options based on tasks you are performing and displays useful information and messages.

QUICK START

Turn on your Analyzer in fresh outdoor air pressing the  button for 2 seconds. Your Analyzer starts a 60 second zero calibration - once completed select your tests by turning the Analyzer rotary dial.

USER INTERFACE


Your Analyzer display shows 5 lines of tests & a status bar. The backlight activates on each button press then turns off after 10 seconds.

Navigate through your options and menu choices via 3 dedicated  
&  buttons.

Button presses are either short or long.

STATUS


Rotate dial to "Status":

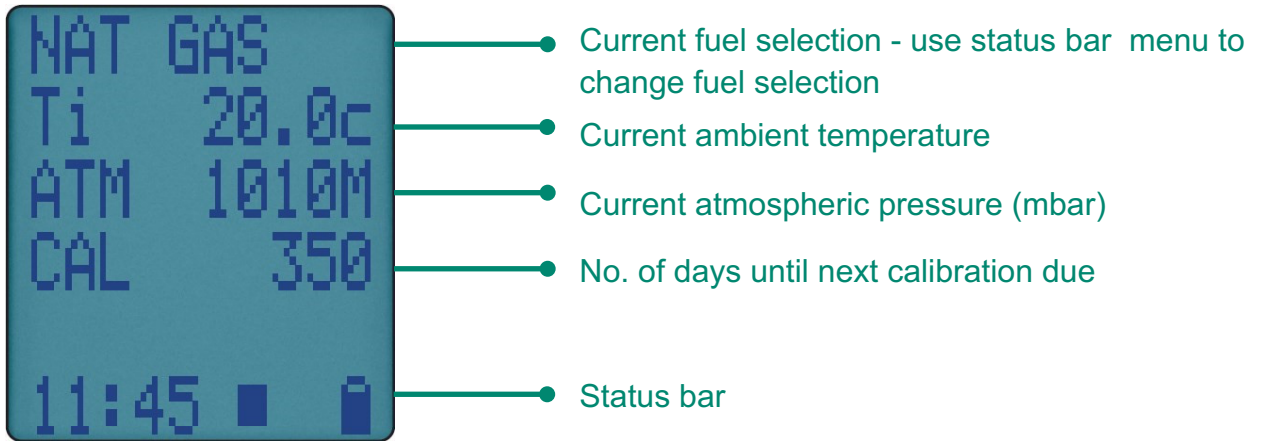

STATUS BAR


Status bar shows Analyzer status and offers options based on your settings.

Navigate through status bar options via ▲ & ▼ buttons when status bar is on display.

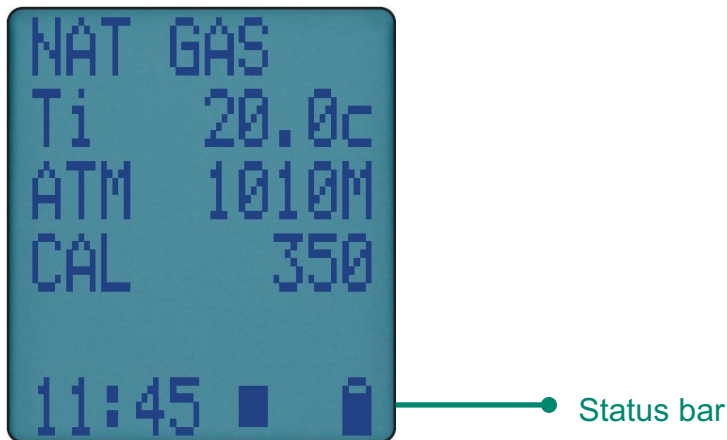

STATUS BAR LAYOUT

Status bar splits into 2 zones, Message & Icons shown below:

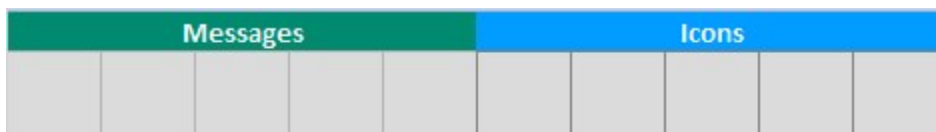

STATUS BAR MESSAGE ZONE

CLOCK FUNCTION



Displays current time

DATA HOLD FUNCTION



Display alternates between hold symbol & Time stamp of held data

CALIBRATION DUE
WARNING MESSAGE



Display alternates between calibration due and current time

AIR PURGE "SNOOZE"
TIMER



Display alternates air purge delay symbol & Current time

LOW BATTERY
WARNING
MESSAGE




Display alternates between BAT symbol & Current time

STATUS BAR ZONES


Icons give quick and simple status information:

STAUS BAR ICON LEVEL

ICON LIST

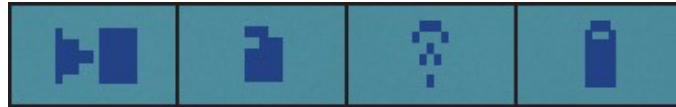


PUMP

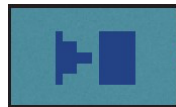


Pump status On or Off

LOGGED DATA

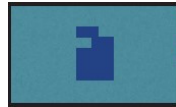


Analyzer has logged/
stored data

SENDING DATA

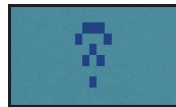

Data being sent to
App or Printer

BATTERY

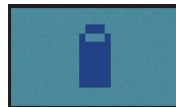


Battery Status indication

STATUS BAR MENU OPTIONS



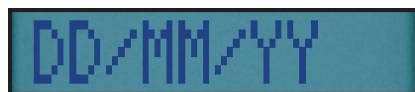

Status Bar offers you contextual menu items based on your display screen.

STANDARD OPTIONS




Date






Displays selected fuel type - to change, long press  button to display selection Indicators. Press  or  buttons to select fuel then press 



Turn rotary dial to AUX position to make changes to AUX screen then long press  button until cursor flashes

USING MENU

Rotate dial to MENU to customise your Analyzer default setting to your requirements.

Navigate through the MENU using these buttons   & 



Menu option to edit

As you navigate up or down items will move up or down the screen returning to the beginning.

Note: To exit menu turn your Analyzer rotary dial to any position - note any unsaved changes will be lost.

MENU ITEMS

MENU ITEM	MENU TEXT	OPTIONS/COMMENTS
TIME	TIME	HH:MM:SS format E.G.. 7am = 07:00:00, 7pm = 19:00:00
DATE	DATE	DD/MM/YY format
HEADER	HEADER	Edit 2 Line Header on your printouts
PRINTER TYPE	IR PRINT	Select, KMIRP, IRP-3
GAS SCALE	GAS UNIT	Select, ppm, mg/m3, Mg/kWh
O2 REF	O2 REF	Used for "Normalized" readings. Default set to 3%, can be adjusted up or down
IF NO OPTION FITTED	NOX CALC	Enables selection of NOx equation types and assumed percentage of NO2. NOx equations are: NOx reference to NO NOx sum equation (NO + NO2) NOx reference to NO2
LOGS	LOGS	View current memory usage & stored logs
AIRFLOW	AIRFLOW	Change airflow scale and adjust pitot factor
EFF	EFF	Efficiency calculation Analyzer set to Gross or Net - Condensing automatically selected based on selected fuel type
LANGUAGE	LANGUAGE	Select required language from list
UTIL	UTIL	Consists of a sub menu to: INFO - View firmware information B'LIGHT - Set backlight timeout (S) LEAK - Perform system integrity test
CODE	CODE	Password protected for authorised service agents only - Default to 000000


MEASURING FLUE GASES

After countdown is finished and your Analyzer is correctly set up, put your flue probe into the appliance sampling point. The probe tip should be in the flue centre - use flue probe depth stop cone to set position.

With balanced flues, make sure probe is positioned far enough into the flue so no air can “back flush” into the probe.

SAFETY WARNING

Ensure your flue probe handle does not get hot!

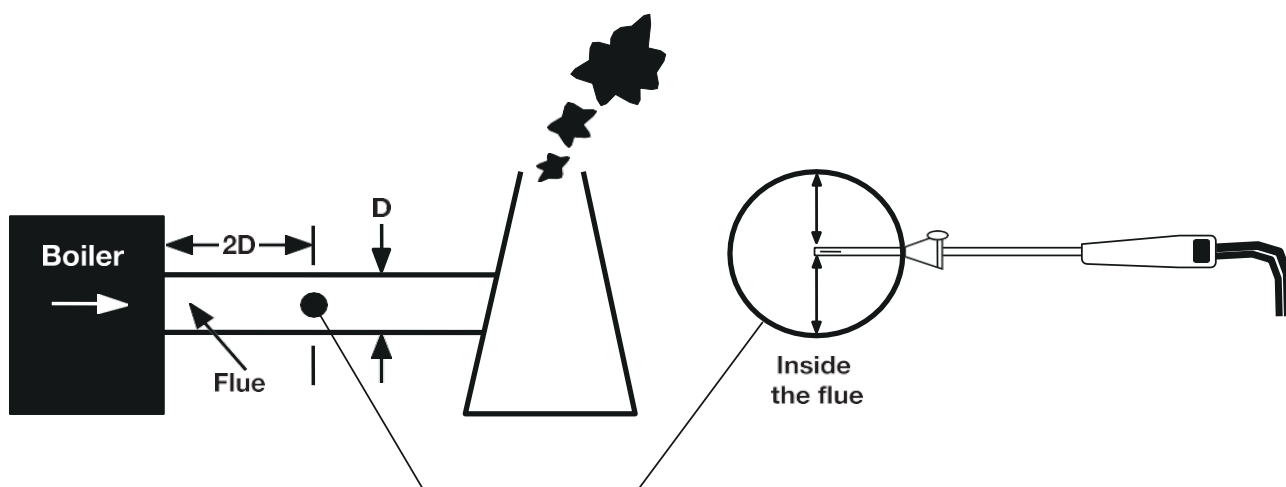

Do not exceed Analyzer operating specifications - In particular:

- Do not exceed flue probe maximum temperature (600°C)
- Do not exceed Analyzer internal temperature operating range
- Do not put Analyzer on a hot surface
- Do not exceed Analyzer water trap levels
- Do not let Analyzer particle filter become dirty and blocked


Check readings are stable and within expected range.

CO SENSOR PROTECTION PUMP OPERATION

Your Analyzer CO sensor is automatically protected from high levels of CO. When CO is above the maximum range of your Analyzer the main pump stops and CO Purge pump starts.

Your Analyzer displays - - - - until CO levels fall below the maximum measurement range.

AUX SCREEN

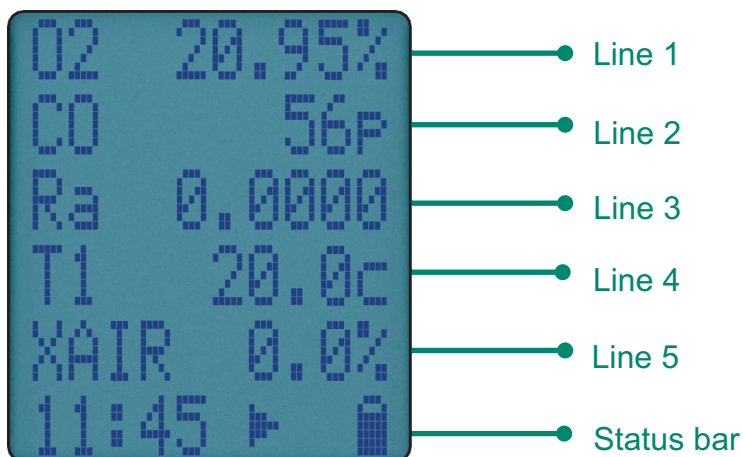


EDITING THE AUX SCREEN

You can customise lines 1 to 5 of your Analyzer AUX screen.


To edit a line, press **←▼** until EDIT appears on the status bar. Press and hold **←** to select EDIT.

Cursor flashes and line number appears in status bar. Use **←▼** to select option to appear on line then press **←** to enter option.

O2/EFF SCREEN

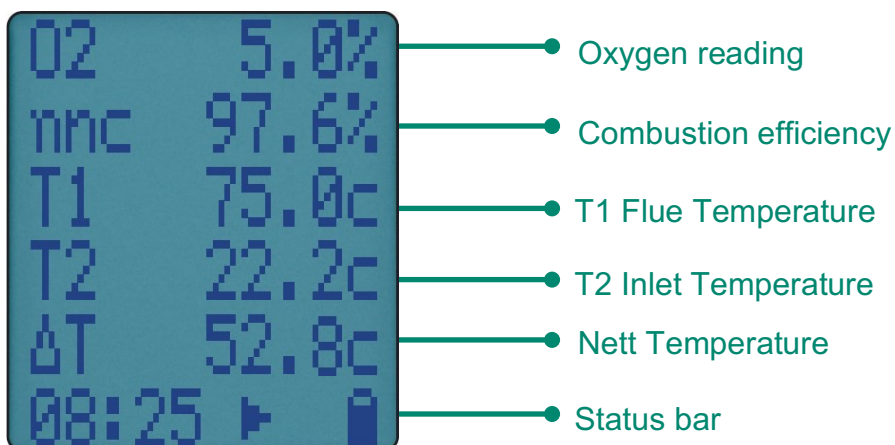

CO/NO SCREEN

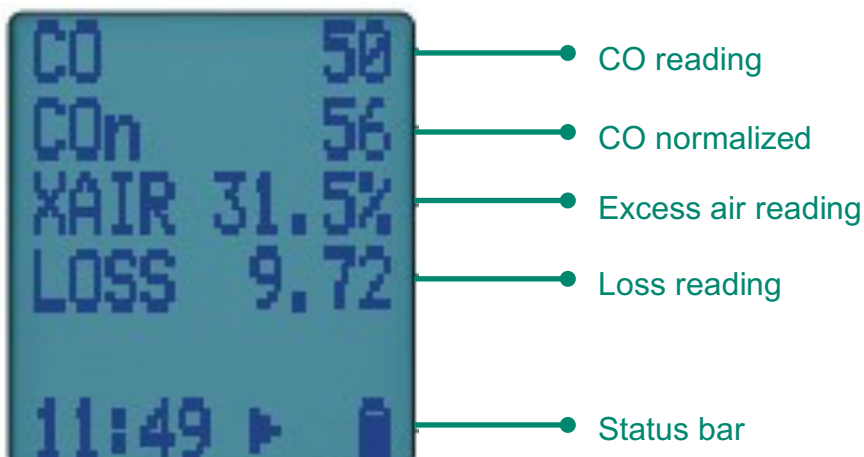


STORED MEMEORY REPORTS


Your KANE958 utilises a shared memory system which means stored logs are not limited by type.

An icon displays when your Analyzer has stored data.

To view current memory rotate dial to MENU then select LOGS to display.

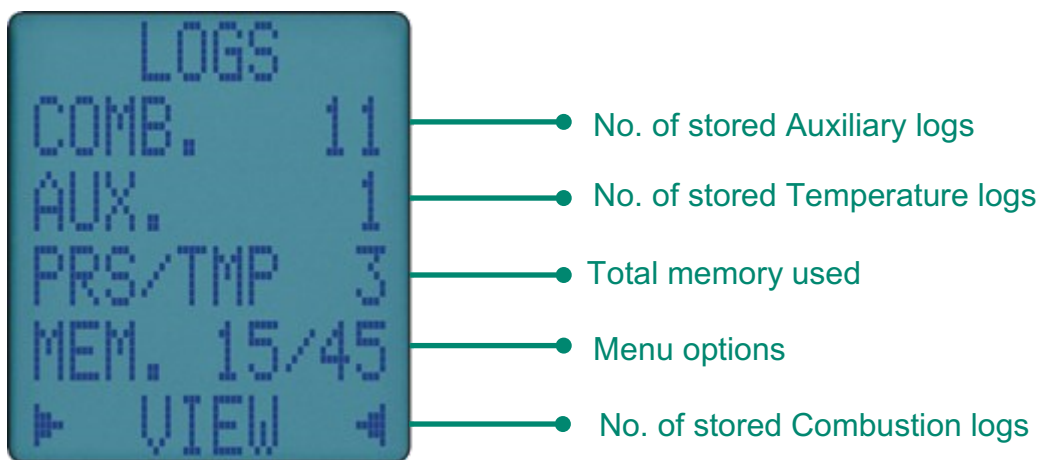

MENU OPTIONS

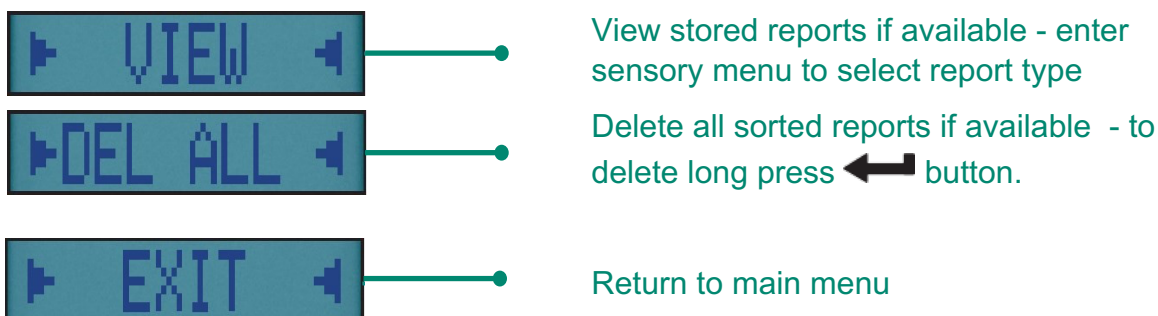

VIEWING STORED REPORTS

To view your reports, select VIEW option from LOGS Menu:



List of available LOGS
To navigate and select use
▼▲ & ←

LOG VIEW MENU OPTIONS



View stored Combustion Reports



View stored Auxiliary Reports




View stored Pressure & Temperature Reports



Returns to previous menu

FINDING STORED REPORTS

Once you select your report type the first stored log is displayed:

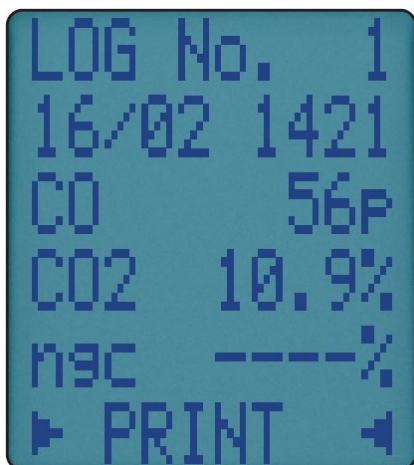

LOG Number of that type

Time and date of LOG

Report readings specific to report type

Navigation menu options

REPORT MENU OPTIONS



Print currently selected report



Use to find next available report if available



Use to find previously selected report once navigation begins



Return to main menu

Note: ROOM CO and tightness are accessed via TEST position.


Rotate dial to TEST to find ROOM CO and TIGHTNESS Tests.

PRESSURE & TEMPERATURE TESTING

WARNING

Never take a pressure reading without knowing the maximum pressure present. Your Analyzer pressure transducer is rated at 160 mbar with a maximum over range of 400 mbar.

Rotate dial to Prs/Temp and use the black connectors & manometer hose to connect to P1 for single pressure or P1 & P2 for different pressure.

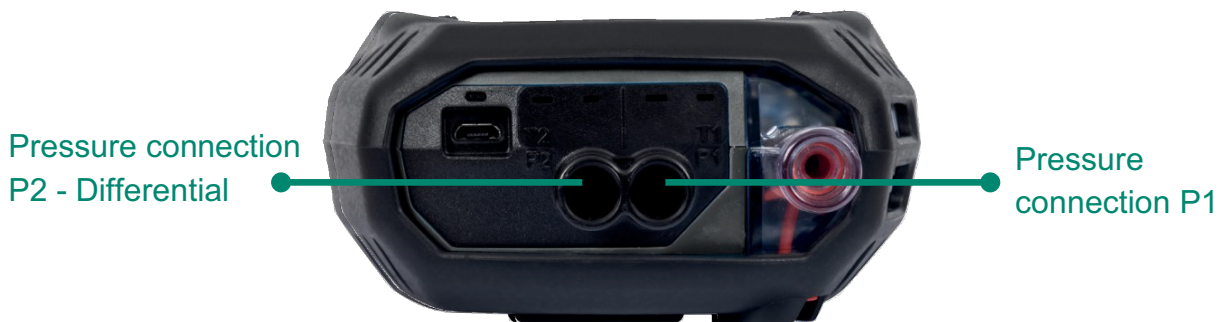

TEMPERATURE & PRESSURE DISPLAY



Use T1 connection for flow temperature sensor


Use T2 connection for return temperature sensor


Real time temperature difference

Real time pressure reading

Status bar

VIEWING & PRINTING

Press  button to send full Pressure & Temperature reports to your optional KANE-IRP3 printer or wirelessly to a KANE APP.

Press and hold  button for 2 seconds to log a pressure and temperature report - See PRINTING to print stored reports.

PRESSURE MEASUREMENT GOOD PRACTICE

WARNING

Before using your KANE958 to measure an appliance gas/air ratio valve, read appliance manufacturer instructions thoroughly. If in doubt, contact appliance manufacturer. After adjusting a gas/air ratio valve CO, CO₂ & CO/CO₂ ratio readings must be within appliance manufacturer specified limits.

LARGE BORE TUBING ISSUES

If using large bore tubing when performing pressure tests:




Push orange tube over rim of spigot to ensure a gas tight seal.




Failure to do so may not produce a gas tight seal.

PRINTING

Press and release  to send test results to your optional KANE IRP-3 printer or wirelessly to KANE APP. You can stop printing by pressing button again.

KANE INFRARED PRINTER

To use your printer, switch on and place the printer infrared receiver in line with the emitter on top of your Analyzer - allow a 15cm gap between  Analyzer and printer.

PRINTOUTS

Auxiliary

```

KANE
KANE958
SW00182 2.01.RC3

NAME
NUMBER

SERIAL NO.      123456789

DATE            08/07/21
TIME            14:51:11

-----
CAL DUE         29/06/22
-----

AUXILIARY
-----
FUEL            NAT GAS
CO(n)          ppm    O2++
NO(n)          ppm    O2++
NOx            ppm    0
O2             %      20.9
LOSS           %      ----

CUSTOMER
-----
-              -
-              -
-----

APPLIANCE
-----
-              -
-              -
-----

REFERENCE
-----
-              -
-              -
-              -
-----
    
```

Combustion

```

KANE
KANE958
SW00182 2.01.RC3

NAME
NUMBER

SERIAL NO.      123456789

DATE            08/07/21
TIME            14:51:19

-----
CAL DUE         29/06/22
-----

COMBUSTION
-----
FUEL            NAT GAS
O2 REF          %      3.0
NOx REF        %      5.0
CO/CO2         0.0000
EFFnc          %      ----
HAIR           %      O2++
PRS            mbar   0.01
T1             °C     ----
T2             °C     ----
Ta             °C     24.8
NETT           °C     ----
LAMBDA         O2++
LOSS           %      ----
F1             %      0.00
CO2            %      0.00
CO             ppm    0
SO             ppm    0
NOx            ppm    0
O2             %      20.9
SO2            ppm    0
-----

CUSTOMER
-----
-              -
-              -
-----

APPLIANCE
-----
-              -
-              -
-----

REFERENCE
-----
-              -
-              -
-              -
-----
    
```

Pressure/Temp

```

KANE
KANE958
SW00182 2.01.RC3

NAME
NUMBER

SERIAL NO.      123456789

DATE            08/07/21
TIME            14:51:28

-----
CAL DUE         29/06/22
-----

PRS/TMP
-----
T1             °C     ----
T2             °C     ----
NETT           °C     ----
PRS            mbar   0.01
-----

CUSTOMER
-----
-              -
-              -
-----


APPLIANCE
-----
-              -
-              -
-----



REFERENCE
-----
-              -
-              -
-              -
-----
    
```

KANE LINK WIRELESS MEASUREMENT AND DATA TRANSFER



You can wirelessly connect optional KANE LINK devices to your Analyzer.



Rotate dial to KANE LINK on your Analyzer to manage how your Analyzer communicates with wireless devices.

To wirelessly transfer data to a connected smart device running our KANE APPS, select APP using 

To ADD, REMOVE and check STATUS of optional KANE LINK device select LINK using  &  buttons.

WPCP2 WIRELESS PIPE CLAMP

To add select it then enter its serial number using  &  buttons.



Enter its serial number using  &  buttons. Each clamp serial number must be 10 digits long.

If longer use the last 10 digits, e.g, in this example only enter last 10 digits:
2105094301



DTHA2 ANEMOMETER

To add a DTHA2 anemometer select DTHA2 using  &  buttons.

Enter its serial number using  &  buttons. Each serial number must be 10 digits long.

If shorter enter 0's to make up to 10 e.g in this example enter 2001228 as 0002001228.



Other KANE LINK devices can be paired - Contact KANE for more details

SPECIFICATIONS

PARAMETER	RANGE	RESOLUTION	ACCURACY
Temperature Measurement			
Flue Temperature Inlet temperature External sensor	0 - 600°C	0.1°C	±0.5°C
Inlet Temperature Internal sensor	0 - 600°C	0.1°C	±0.5°C
(Internal Sensor) Inlet temperature	0.50°C	0.1°C	±1°C
Flue Gas Measurement			
Oxygen	0 - 25%	0.1%	±0.3% Volume
Carbon Monoxide H2 Compensated	0 - 10,000ppm	1ppm	±5ppm < 100ppm ±20ppm < 400ppm ±5% > 400ppm - 2000ppm ±10% > 2000ppm -10,000ppm
Nitric Oxide (optional)	0 - 5000ppm	1ppm	±5ppm < 100ppm 5% > 100ppm
Nitrogen Dioxide (optional)	0 - 1000ppm	1ppm	±5ppm < 100ppm 5% > 100ppm
Sulphur Dioxide (optional)	0 - 5000ppm	1ppm	±5ppm < 100ppm ±5% > 100ppm
Pressure Measurement			
Pressure (Differential)	±160mbar	0.1mbar	±0.5% FSD
Calculations			
CO/CO2 Ratio	0 - 0.9999	0.0001	±5% of reading
Efficiency (Net or Gross)	0 - 99.9%	0.1%	±1% of reading
Efficiency High (C)	0 -119.9%	0.1%	±1% of reading
Excess Air	0 -119.9%	0.1%	±0.2% of reading
Pre-programmed Fuels			
UK, USA & France European	Natural Gas, LPG, Light Oil, Digester Gas, Coke, Wood, Heavy Oil, Coal		
Battery Life	>8 hours (continuous with pump on)		
Certification	KANE958 is independently tested and certified to EN50379, Parts 1-2 in accordance to 1st German Federal Emission Control Ordinance (BimschV)		

SPECIFICATIONS CONTINUED

Operating Conditions	
Temperatures	0 to 113°F (0 to 45°C)
Humidity	15 to 90% RH, (non-condensing)
Power Supply	Rechargeable batteries, USB Charging
Physical Characteristics	
Weight	Approx. 2.5lb (1.34kg)
Dimensions	8.5in x 4.1in x 1.7in (216mm x 105mm x 45mm)

THIS PRODUCT CONFIRMS WITH THE FOLLOWING



The KANE958 is independently tested and certified to EN 50379, Parts 1 & 3.

Warranty

The KANE958 is warranted to be free from defects in materials and workmanship for a period of 1 year from the date of purchase. If within the warranty period your instrument should become inoperative from such defects, the unit will be repaired or replaced at UEi's option. This warranty covers normal use and does not cover damage which occurs in shipment or failure which results from alteration, tampering, accident, misuse, abuse, neglect or improper maintenance. Batteries and consequential damage resulting from failed batteries are not covered by warranty.

Any implied warranties, including but not limited to implied warranties of merchantability and fitness for a particular purpose, are limited to the express warranty. UEi shall not be liable for loss of use of the instrument or other incidental or consequential damages, expenses, or economic loss, or for any claim or claims for such damage, expenses or economic loss. A purchase receipt or other proof of original purchase date will be required before warranty repairs will be rendered. Instruments out of warranty will be repaired (when repairable) for a service charge

For more information on warranty and service, contact:

www.ueitest.com • Email: info@ueitest.com • 1-800-547-5740

This warranty gives you specific legal rights. You may also have other rights, which vary from state to state.



Complete Care for Your Combustion Analyzer.

BACKED BY



10
YEAR
WARRANTY



When you:

***Request Annual Recertification or Service Online
Within 1 Year of Purchase or Last Service Date***

UEi will:

10-Year Warranty: All UEi combustion analyzers have a standard 1-year warranty. Each recertification extends the warranty for 1 more year for up to **10 years** from the date of purchase.

Contractors who book recertification of a KANE958 analyzer at www.ueitest.com/service within 12 months from either the date of purchase or the date of the last recertification will receive reduced service pricing that lowers the cost of ownership and 2 additional benefits:

48-Hour Service: All qualifying KANE958 analyzers received for recertification through UEi Service+ are returned on the second business day.

Free Shipping: UEi Service+ offers free shipping both to and from our service center. When customers book their recertification, they receive a prepaid UPS Ground shipping label.

Register Online

Registering your analyzer online is quick and easy. Just log in or setup an account, it only takes a couple of minutes. Once logged in you can register your analyzer by providing some product information and uploading a proof-of-purchase. When it's time to request recertification, just log into your account, select the analyzer, select the service and place your order.

Canadian Customers

All Canadian customers needing annual recertification should visit <https://www.kanetest.ca>.